

REMOVAL AND INSTALLATION

Exterior Mirror Control Switch

Removal and Installation

1. Remove the LH sail panel.
 - Disconnect the electrical connector.
 2. Remove the exterior mirror control switch from the sail panel.
 3. To install, reverse the removal procedure.
-