

---

## REMOVAL AND INSTALLATION

### Exterior Mirror Motor

#### Removal and Installation

1. Remove the exterior mirror glass. For additional information, refer to Exterior Mirror Glass in this section.
  2. Remove the 3 exterior mirror motor screws.
    - To install, tighten to 7 Nm (62 lb-in).
  3. Disconnect the exterior mirror motor electrical connector.
  4. Remove the exterior mirror motor.
  5. To install, reverse the removal procedure.
-