


REMOVAL AND INSTALLATION

Exterior Mirrors — Exploded View

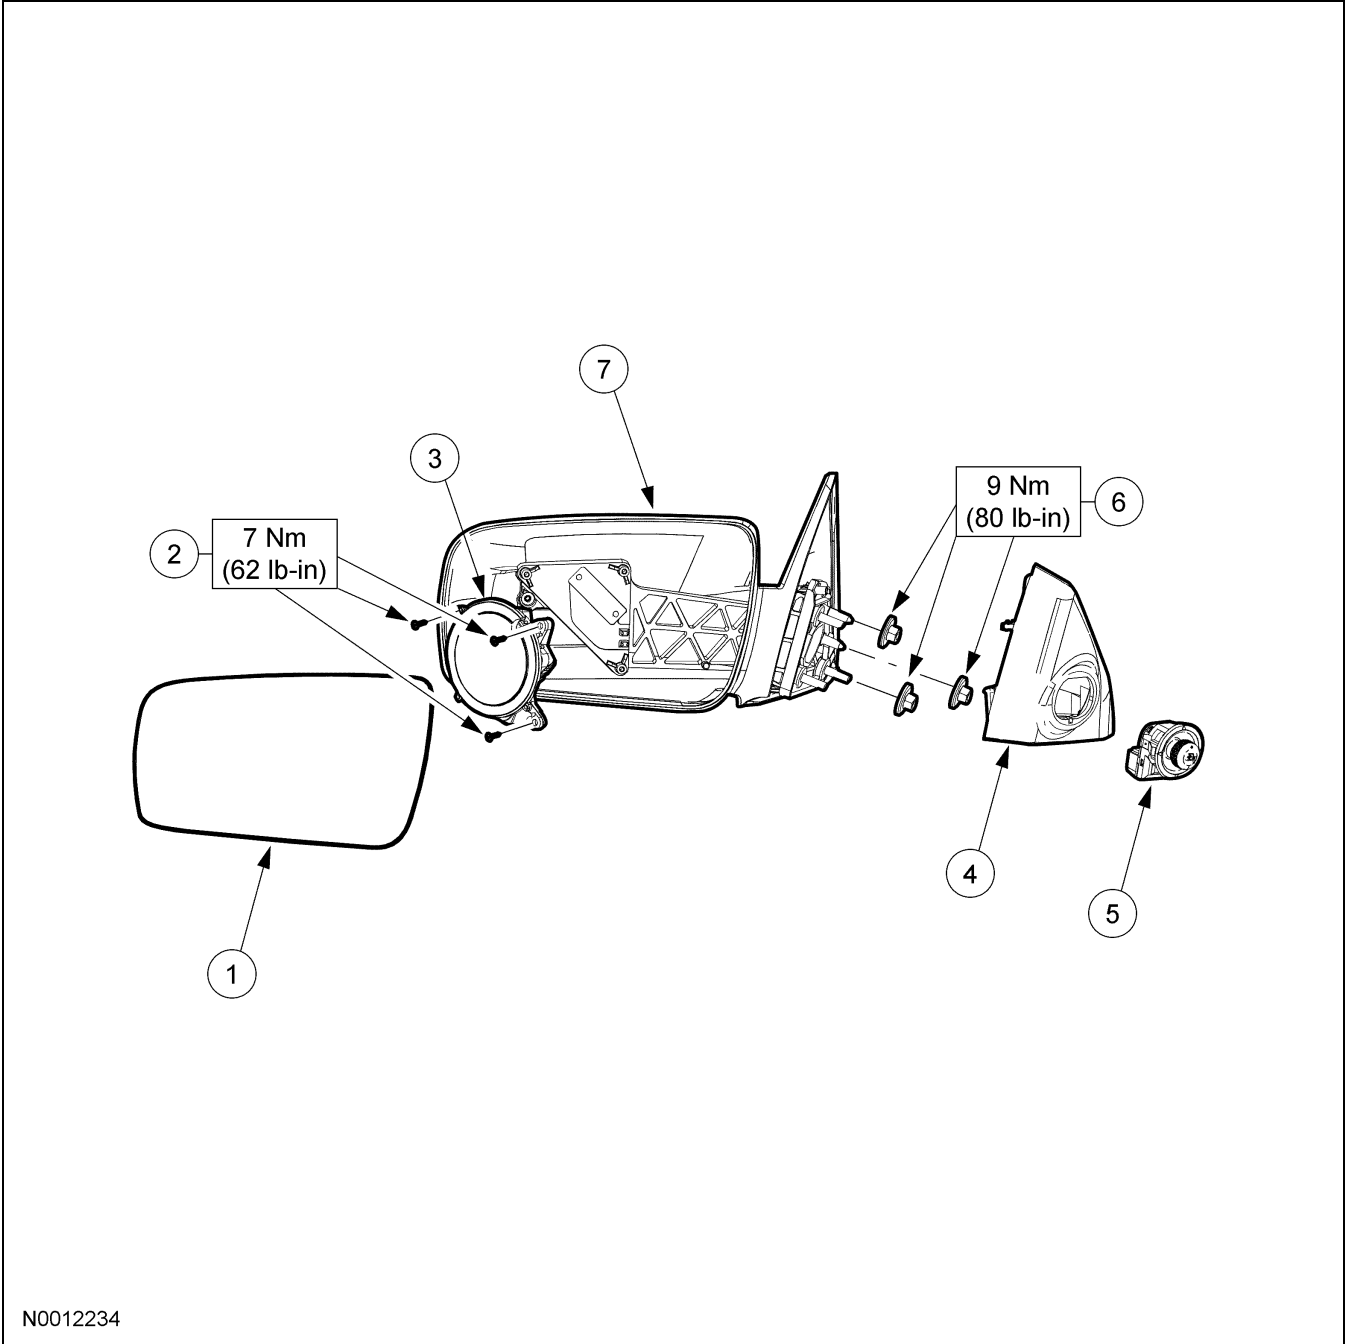

| Item | Part Number | Description |
|------|-------------------------------|---|
| 1 | 17K707 (RH), 17T675-A (LH) | Exterior mirror glass |
| 2 | — | Exterior mirror motor screws (3 per side required) |
| 3 | 17D696-B | Exterior mirror motor |

(Continued)

| Item | Part Number | Description |
|------|------------------------------------|--|
| 4 | 17D698-B (RH), 17D699-B (LH) | Sail panel |
| 5 | 17B676-A | Exterior mirror control switch |
| 6 | N621907-S | Exterior mirror mounting nuts (3 per side required) |
| 7 | 17682-A (RH), 17683-A (LH) | Exterior mirror housing |

REMOVAL AND INSTALLATION (Continued)

1. For additional information, refer to the procedures in this section.
-