 



## REMOVAL AND INSTALLATION

### Interior Rear View Mirror

#### Special Tool(s)

 <p data-bbox="266 554 367 575">ST1793-A</p>	<p data-bbox="396 352 699 411">Installer, Rear View Mirror 501-025 (T94P-17700-AH)</p>
---	--

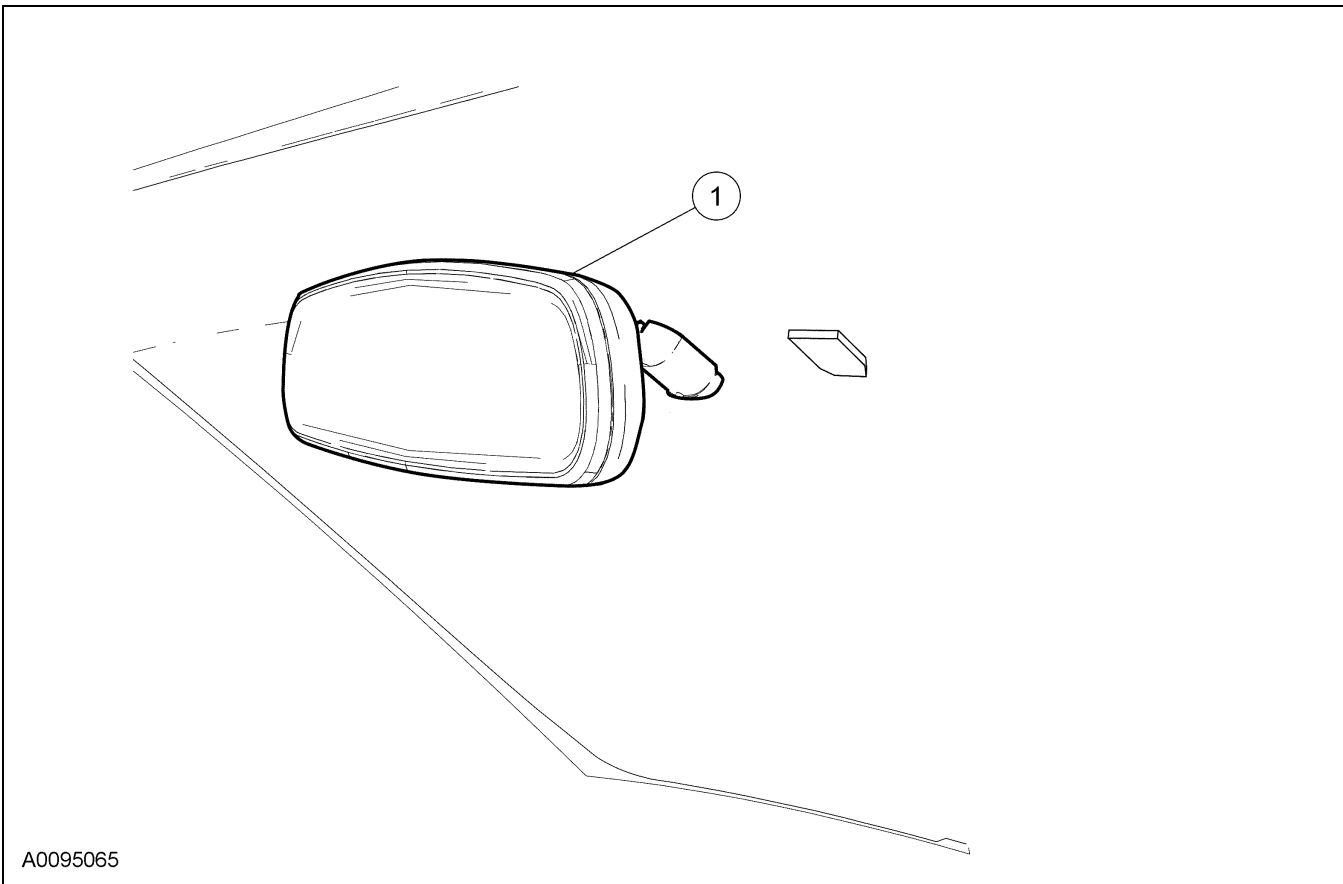

Item	Part Number	Description
1	17E678	Interior rear view mirror

#### Removal

**⚠ CAUTION:** The interior rear view mirror is of the break-away design. Excessive force in any direction may cause damage to the mirror or the windshield.

1. Position the interior rear view mirror in the full up position.

2. Insert a suitable tool between the bottom of the mirror mount and bracket. Push upward on the tool until the mirror mount is released from the bracket.

#### Installation

1. Place the interior rear view mirror on the windshield bracket.

**REMOVAL AND INSTALLATION (Continued)**

- Using the special tool, press the interior rear view mirror in place until fully seated.

