
REMOVAL AND INSTALLATION

Rear Bumper Cover

Removal and Installation

1. Remove the 4 pin-type retainers and the luggage compartment trim panel.
 2. Remove the 4 rear bumper cover-to-bumper cover bracket screws.
 3. **NOTE:** GT vehicles are equipped with 3 pin-type retainers.
If equipped, remove the 3 rear bumper cover pin-type retainers.
 4. From inside the luggage compartment, remove the 4 rear bumper cover nuts.
 - To install, tighten to 5 Nm (44 lb-in).
 5. Disconnect the electrical connector from inside the luggage compartment and remove the rear bumper cover.
 - Feed the rear bumper electrical harness through the rear of the vehicle.
 6. To install, reverse the removal procedure.
-